


## How to check when Overheating light ON

First of all, check you have enough coolant in radiator or not. A lots of people make this mistake. Of course, not enough coolant cause overheat light ON.

### Step 1. Check whether FAN is work or not

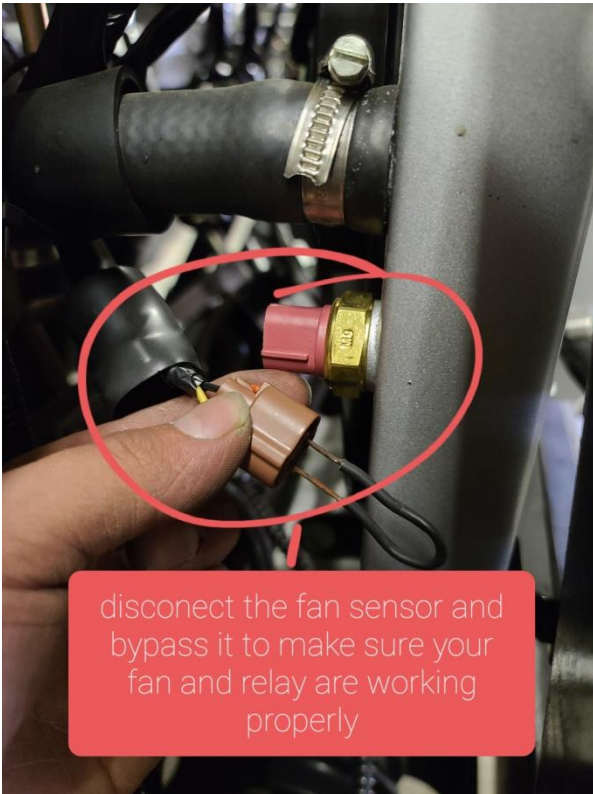


**Disconnect the fan sensor and connect HOT WIRE.**

**If NOT work, go to next step 2**

**If the Fan works, your fan Sensor is NO good and fan sensor should be replaced.**

### Step 2. If Fan sensor is fine, Check the Relay in the Battery Box

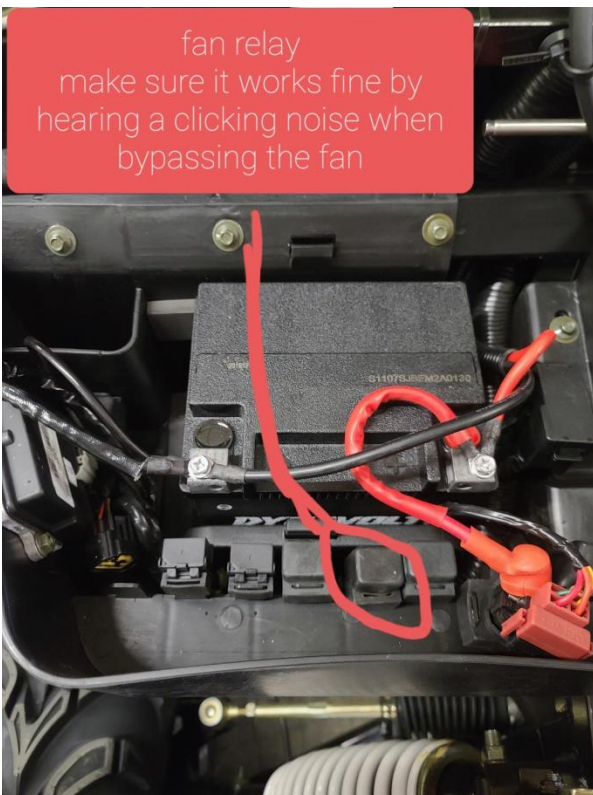

**If the Relay is fine, you can hear "Click""Click" sound.**

**If no sounds, change the relay. It's No good.**

3. If process 1 & 2 are all fine, Please replace temperature sensor

