


WHEN VERY HARD TO DO SHIFTING

You put each gear and adjust that screw until shifting is good

loosen nuts and adjust linkage accordingly to GEAR

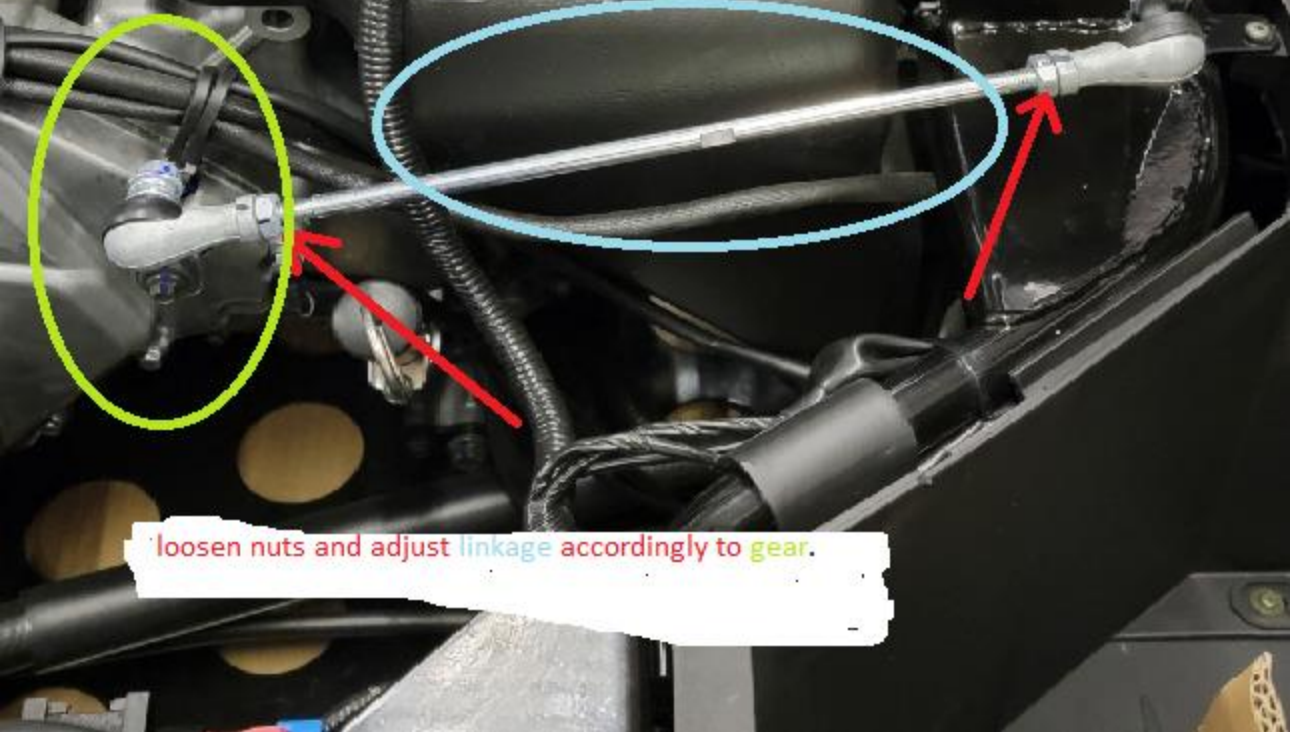

loosen nuts and adjust linkage accordingly to gear.