

MAINTENANCE AND ADJUSTMENT

 **CAUTION:**

To avoid personal injury and vehicle damage:

- Be sure you have sufficient knowledge, experience, the proper replacement parts and tools before you attempt any vehicle maintenance task.
- If you don't have the knowledge and equipment which are necessary to perform the maintenance task, consult your local dealer.
- Have your local dealer perform inspection items which are marked *4 in the chart below.

SERVICE INTERVALS

IMPORTANT:

- The jobs indicated by © must be done after the first 50 hours of operation.
- *1 Air cleaner should be cleaned more often in dusty conditions than in normal conditions.
- *2 Every year or every 6 times of cleaning.
- *3 Replace only if necessary.
- *4 Consult your local dealer for this service.
- *5 When the battery is used for less than 100 hours per year, check the battery condition by reading the indicator annually.
- The items listed below (@marked) are registered as emission related critical parts by DEALER in the U.S.EPA non road emission regulation. As the engine owner, you are responsible for the performance of the required maintenance on the engine according to the below instruction. Please see Warranty Statement in detail.

No.	Items		Indication of													After 700 hrs		
			50	100	150	200	250	300	350	400	450	500	550	600	650		700	
1	Engine oil	Change	©			○				○					○			Every 200 hrs
2	Engine oil filter	Replace	©			○				○					○			Every 200 hrs
3	Transmission fluid	Change								○								Every 400 hrs
4	Engine start system	Check	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	Every 50 hrs
5	Greasing	Apply	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	Every 50 hrs
6	Muffler	Clean	©	○		○		○		○		○		○		○		Every 100 hrs

MAINTENANCE

22	Knuckle case oil	Change															Every 400 hrs
23	Engine valve clearance	Adjust															Every 800 hrs
24	Fuel injection	Check															Every 1500 hrs
25	Injection	Check															Every 3900 hrs
26	Brake fluid	Change															Every 2 years
27	Remote hydraulic hose	Replace															Every 2 years
28	Rear brake cylinder seal	Replace															Every 2 years
29	Front brake seal	Replace															Every 2 years
30	Cooling system	Flush															Every 2 years
31	Coolant	Change															Every 2 years
32	Fuel system	Bleed															Service as required
33	Fuse	Replace															
34	Light bulb	Replace															

NOTE:

◆Engine Oil: (15W/40SL)

Oil used in the engine should have an American Petroleum Institute (API) service classification and Proper SAE Engine Oil according to the ambient temperatures as shown above.

◆Brake fluid:

Always use DOT3 GENUINE BRAKE FLUID from a sealed container.